


Disney

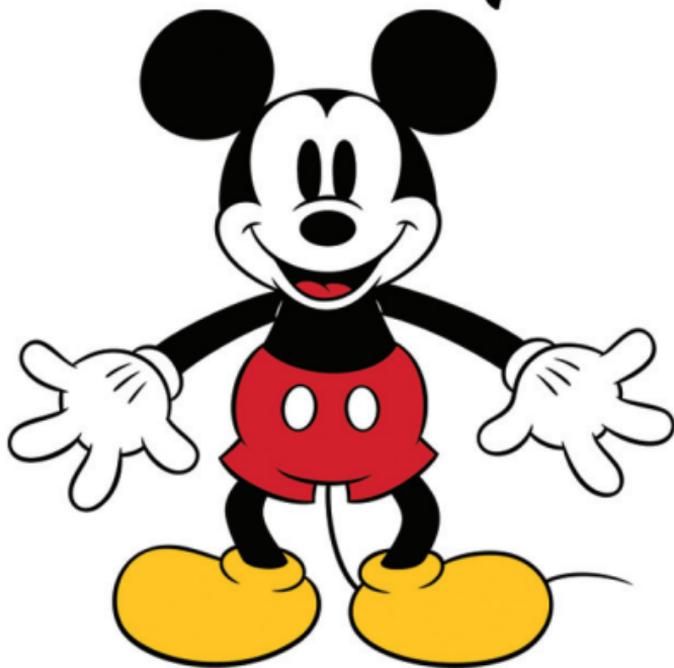

## Quartz watch instruction



*To set the time:*

1. Fix the crown at the position 2.
2. Rotate the crown to set hour and second hand.
3. After setting time push in the crown to its original position. Do not push too hard and make sure the crown is pushed completely back into place.

## Electronic watch instruction



*Time Mode:*

Press B to enter different modes.

TIME – STOP WATCH – ALARM SETTING –  
TIME SETTING accordingly

*Stop Watch:*

1. Press B once to select stop watch.
2. Press C to start / stop counting.
3. The range of the stop watch is 59min, 59.99 sec.

*\*Split Time*

1. Press D to check split time during counting.
2. Press D again to release split, then the display will show current running time of stopwatch.

*\*Pause*

3. Press C to pause during counting.
4. Press C again to resume counting.
5. Press C again to check record time.
6. Press D to reset during stop.

*Alarm Setting:*

1. Press B twice to select alarm setting.
2. Press D to select hr, min (A/P in 12 hours format or H in 24 hours format).

3. Press C to adjust.
  4. Press B to confirm the setting.
- \* Alarm ON / OFF
5. In normal time mode, press C and D at the same time to select alarm on/ off.
  6. When the alarm is on, "BELL" will be blacked on screen.
  7. Alarm stop by pressing C and D at the same time once.

*Time Setting:*

1. Press B three times to select time setting.
2. Press D to select sec, min, hr, month, date, day of the week (during setting 12/24 hours can be selected by 1 day cycle. i.e. AM/PM in 12 hours format or H in 24 hours format).
3. Press C to adjust.
4. Press B to confirm the setting.

*Hourly Chime:*

1. In normal time mode, press C and D at the same time to select hourly chime on / off.
2. When the hourly chime is on, "((CH))" will be blacked on screen.

*Light:*

Press A to activate back light.

## **SPECIAL DIRECTIONS**

### **Water resistance**

Water protection level	Light spray, rain, etc.	Hand washing	Swimming, diving	Scuba diving
3 ATM (30M)	yes	no	no	no

### **Precautions and recommendations**

Like any other accurate micromechanical device, your watch must be regularly inspected at the authorized service centre. It is recommended that you replace the rubber gasket preventing water or dust from entering the inside of the watch once every 2 years. Once every 1.5 year mechanical watches must be cleaned, lubricated and adjusted. For quartz watches, this procedure must be performed at least once every 5 years.

Protect your watch from extreme temperature fluctuations. The movement accuracy of any type of the watch (quartz or mechanical) depends on envi-

ronment in which it is used as well as temperature. Avoid exposing your watch to sudden temperature fluctuations and do not leave it in direct sunlight or in a very hot or cold place. The watch runs most accurately when it is used between + 5` and +25`C temperature.

The mechanism of the watch may also be damaged by natural factors, static electricity, chemical industry fields and magnetic fields.

To clean the casing and the band, use a soft cloth or a cloth moistened in water and a small dose of mild neutral detergent. Protect your watch from the effect of chemical substances; do not clean it with corrosive or flammable liquids: petrol, spirit, acetone, etc.

Protect your watch from high-intensity impacts and shocks. Vibration and intense shaking during workouts do not cause damage to the watch.

If the watch has been immersed in sea water, wash it with fresh water and dry well.

void very humid environments. Keep your watch in a dry place.

It is recommended to remove your watch before going to sleep, sports, trips to the pool, SPA, etc.,

as may occur a risk of premature wear of products. It is recommended to avoid contact with decorative cosmetics and perfumes, it is also important to avoid exposure to chlorine or salt water - this can cause fading and loss of gloss.

## **WARRANTY SERVICE**

### **Terms and obligations**

If the buyer violates the terms and rules set out in this warranty card, this shall result in the termination of the warranty coverage and on this basis the seller shall have the right to refuse warranty service.

When buying the watch, please make sure that all the sections of the product's passport are filled out in a legible manner and the data specified (place, date and price of purchase) correspond to the data of the watch you have purchased.

Corrections, deletions and additions to the watch documents shall result in the termination of the warranty coverage if they are not approved by the seller's signature and seal.

The warranty covers only the mechanism of the watch. The warranty does not cover the battery, the watch crystal, casing and the bracelet (band). During the service life of the watch, it is necessary to strictly follow the rules set out in its passport and the instructions for use as well as the manufacturer's prohibitions.

The maintenance, adjustment, periodic cleaning and lubrication and component replacement must be performed only by a specialized body authorized by the manufacturer whose address is indicated in the warranty card (hereinafter – the Authorized Body).

Consumers should not try to open and repair the watch themselves. Do not entrust any watch repair to bodies not authorized by the manufacturer of the watch.

If the watch has cracks, scratches or other damage indicating unauthorized attempts to open the watch, the warranty shall cease to be valid.

Maintenance work done on the watch must be specified as to the nature of work and approved by the repairer's signature and by the seal of the Authorized Body.

The buyer must present all technical and operational documents of the product and product and cashier receipts issued by the seller at the time of purchasing the watch.

The Authorized Body, after accepting the watch for inspection, shall issue a certificate to the buyer confirming this acceptance.

### **Service Center Information:**

1. Ukmerges g. 369a, LT-12142 Vilnius,  
tel. +37065921442

Opening hours: Monday-Friday 08:00 - 17:00.

2. Kastanaevskaya str., 42/2, Moscow, Russia,  
121108, tel. +7 (495) 234-0017

Opening hours: Monday-Friday 10:00-20:00,  
Saturday 10:00-16:00.

### **WARRANTY**

2-year warranty is applied for your purchase counting from the date of receipt.

## Инструкция для кварцевых часов



### Установка времени:

1. Установите головку в положение 2.
2. Поверните головку, чтобы установить минутную и часовую стрелки.
3. После установки времени верните заводную коронку в положение 1. Не нажимайте слишком сильно и убедитесь, что заводная коронка заблокирована.

## Инструкция для электронных часов



*Режим:*

Нажмите кнопку В, чтобы выбрать режим.  
Время - Секундомер - Установка будильника –  
Установка времени

*Секундомер:*

1. Нажмите кнопку В один раз для выбора секундомера.
2. Нажмите кнопку С, чтобы начать отсчет.
3. Диапазон секундомера 59 мин. 59,99 сек.

*\* Доля секунды*

1. Нажмите кнопку D, чтобы проверить время во время отсчета.
2. Нажмите кнопку D снова для сброса, дисплей покажет текущее время секундомера.

*\*Пауза*

3. Нажмите кнопку С, чтобы приостановить отсчет времени.
4. Нажмите кнопку С снова, чтобы возобновить отсчет.
5. Нажмите кнопку С снова, чтобы проверить время записи.
6. Нажмите кнопку С для сброса во время остановки.

*Установка будильника:*

1. Нажмите кнопку В дважды, чтобы выбрать настройку сигнала.
2. Нажмите кнопку D, чтобы выбрать час, мин (A/P в формате 12 часов или H в формате 24 часа).
3. Нажмите кнопку С для регулировки.
4. Нажмите кнопку В, чтобы подтвердить установку.

\* Сигнал будильника ON/OFF

5. В нормальном режиме времени, нажмите кнопки С и D, для включения/выключения сигнала.
6. Когда сигнал включен, на экране загорится индикатор «BELL».
7. Для остановки сигнала нажмите кнопки С и D один раз.

*Установка времени:*

1. Нажмите кнопку В три раза, чтобы выбрать настройки времени.
2. Нажмите кнопку D, чтобы выбрать секунду,

минуту, час, месяц, дату, день недели (во время установки 12/24 часов может быть выбран цикл, т. е. AM/PM в 12 часовом формате или H в 24 часовом формате).

3. Нажмите кнопку C для регулировки.

4. Нажмите кнопку B, чтобы подтвердить установку.

*Почасовой сигнал:*

1. В нормальном режиме времени, нажимайте кнопки C и D, чтобы включить/выключить почасовой сигнал.

2. Когда почасовой сигнал включен, на экране загорится индикатор «((CH))» .

*Подсветка:*

Нажмите кнопку A, чтобы активировать подсветку.

## ОСОБЫЕ ИНСТРУКЦИИ

### Водонепроницаемость

Степень водозащиты	Легкие брызги, дождь и т.п.	Мытье рук	Плавание, ныряние	Погружение с аквалангом
3 ATM (30M)	да	нет	нет	нет

### Методы предосторожности и рекомендации по уходу

Ваши часы, как всякий прибор точной микромеханики, должны регулярно проходить проверку в авторизованном сервисном центре. Рекомендуется один раз в 2 года производить замену резиновой прокладки, защищающей часы от попадания влаги и пыли и один раз в 1,5 года производить чистку, смазку и регулировку механических часов, а кварцевых часов – не реже одного раза в 5 лет.

Избегайте воздействия экстремальных температур. Точность хода любых часов (кварцевых или механических) зависит от температурного

режима их использования. Старайтесь не подвергать часы резким перепадам температуры, не оставляйте часы под прямыми солнечными лучами или в очень горячих или холодных местах на длительный срок. Наиболее точные показания при эксплуатации часов приходятся на диапазон температур от +5`C до +25`C.

Не допускайте воздействия на часы природных факторов, статического электричества, химически агрессивной среды, магнитных полей.

Для чистки корпуса или браслета часов используйте сухую мягкую ткань, либо мягкую ткань, смоченную в водном растворе мягкого нейтрального моющего средства.

Не подвергайте часы сильным ударам. Часы не боятся вибрации и сильных толчков, которые могут происходить при занятии спортом.

После прибывания в морской воде часы следует промыть пресной водой и тщательно вытереть. Избегайте условий повышенной влажности. Храните часы в сухом месте.

Рекомендуется снимать часы перед сном, занятиями спортом, походами в бассейн, SPA и т.п.,

так как может возникнуть риск преждевременного износа изделий.

Рекомендуется избегать контакта ювелирного изделия с декоративной косметикой и духами, также важно избегать воздействия хлорированной или соленой воды — это может привести к его потускнению и потере блеска.

## **ГАРАНТИЙНОЕ ОБСЛУЖИВАНИЕ**

### **Условия и обязательства**

Нарушение покупателем перечисленных в настоящем паспорте условий и правил влечет недействительность гарантии и является основанием для отказа в удовлетворении требований покупателя об исполнении продавцом гарантийных обязательств.

При приобретении товара убедитесь, что все разделы паспорта на часы заполнены разборчиво, а сведения в них соответствуют фактическим данным о приобретенном Вами изделии, месте, дате и цене покупки.

Исправления, подчистки и дополнения в документации на часы, а так же в гарантийном талоне, не заверенные подписью и печатью продавца, влекут недействительность гарантии.

Гарантия распространяется только на механизм. В гарантию не включен элемент питания, стекло, корпус, браслет/ремень.

Во время использования часов неукоснительно соблюдайте правила, указанные в паспорте и инструкции по эксплуатации, не допускайте использования часов в режимах, запрещенных производителем.

Техническое обслуживание часов, в том числе регулировку, периодическую чистку и смазку, а так же замену элементов питания производите только в специализированной организации, уполномоченной продавцом, адрес которой указан в данном паспорте (далее уполномоченная организация).

Не вскрывайте и не ремонтируйте часы самостоятельно. В течение гарантийного срока не ремонтируйте часы в организациях, не уполномоченных продавцом.

Часы, имеющие срывы, царапины и иные повреждения, свидетельствующие о попытках вскрытия, гарантийному обслуживанию не подлежат.

Факт проведения технического обслуживания и сведения о выполненных работах должны быть подтверждены подписью мастера и печатью Уполномоченной организации.

Покупатель обязан передать полный комплект технической и эксплуатационной документации, копию товарного и кассового чеков, выданных ему продавцом при продаже часов. Факт приема часов на проверку подтверждается актом, выдаваемым покупателю Уполномоченной организацией.

### **Сервисный центр:**

Москва, ул. Кастанаевская, д. 42, корп. 2

телефон: +7 (495) 234-00-17

Часы работы:

понедельник-пятница 10.00 - 20.00,

суббота 10.00 - 16.00

### **ГАРАНТИЯ**

Срок гарантийного обслуживания - 2 года с даты, указанной в вашем чеке.

©Disney

[www.disney.ru](http://www.disney.ru)

[www.disneywatches.ru](http://www.disneywatches.ru)

